



FIGURE 18 FRONT & CENTER SECTION—FUSELAGE



ILLUSTRATED PARTS CATALOG

FIGURE 18

FRONT AND CENTER SECTION ASSEMBLY - FUSELAGE

FIGURE AND REF. NO.	PART NUMBER	PART NAME						UNITS REQ'D ON MODEL
		1	2	3	4	5	6	
	0410001-50	Front And Center Section Assembly						1
18-1	See Figure 19	Front Section Assembly						1
18-2	See Figure 21	Bulkhead Assembly - Landing Gear						1
18-3	0411372-49	Top Assembly - Cabin						1
18-4	0411123-2	Skin - Cabin Top						1
18-5	0411174	Frame - Cabin Top Window						2
18-6	0413181	Clip - Upholstery						14
18-7	0411372-50	Window - Cabin Top						2
18-8	0412152-2	Moulding - Window						1
18-9	0411718	Stiffener Assembly - Cabin Top						2
	0411680	Hanger - Upholstery						1
18-10	0511118	Vent Assembly - Fuel Tank						1
18-11	0411670	Bracket - Antenna						1
18-12	0413142	Light Assembly - Dome						1
	0413139	Bezel - Dome Light						1
	0413141	Lens - Dome Light						1
	0413142-2	Switch - Dome Light						1
	0413140-3	Reflector - Dome Light						1
	0413138	Socket - Dome Light						1
	0511060-1	Bulb - Dome Light						1
	AN931-3-5	Grommet						1
	NAS395-1-3	Nut - (Tinnerman A6187-42-3)						4
	PK76X2-4-5	Screw - (Attach Switch To Reflector)						2
	PK76X2-4-6	Screw - (Attach Bezel To Reflector)						2
	NAS42DD-4-48	Spacer - Dome Light (Attach Light To Top)						2
	AN470AD4-6	Rivet - (Attach Dome Light To Top)						2
18-13	0413327	Rib Assembly - Fuselage Center Section - Left						1
	0413327-1	Rib Assembly - Fuselage Center Section - Right						1
18-14	0411850	Bracket						1
18-15	AN931-3-5	Grommet						1
18-16	0411696	Support Assembly - Cabin Headlining - Left						1
	0411696-1	Support Assembly - Cabin Headlining - Right						1
18-17	0411696-5	Clip						3
18-18	0511153-4	Retainer - Cabin Headlining						2
18-19	0411622	Fillet - Door Frame Upper Forward						2
18-20	0411618-14	Jamb Assembly - Door - Left						1
	0411618-15	Jamb Assembly - Door - Right						1
18-21	0411121	Jamb - Door Rear - Left						1
	0411121-1	Jamb - Door Rear - Right						1
18-22	0411457	Catch - Seat Back - Left						1
18-23	0411457-1	Catch - Seat Back - Right						1
18-24	0511502 011:552	Strike Plate - Door Latch						1
	NAS445-5	Nutplate - (Tinnerman A6196-8Z-3)						2
	PK76X2-8-6	Screw - (Attach Strike Plate)						2
18-25	0411413	Fillet - Door Frame Upper Aft						1
18-26	0411146	Fillet - Door Frame Lower Aft						1
18-27	0411689	Retainer - Upholstery						1
18-28	0411620	Sill Assembly - Door - Left						1
18-29	0411620-1	Sill Assembly - Door - Right						1
18-30	0411122	Sill - Door - Left						1
	0411122-1	Sill - Door - Right						1
18-31	0411147	Fillet - Door Frame Lower Forward						1
18-32	0411345	Support - Door Sill Lower						1
	0411315	Bracket - Seat Back Pivot - Left						1
18-33	0411315-1	Bracket - Seat Back Pivot - Right						1
18-34	0411611-48	Skin - Landing Gear Bulkhead - Left						1
	0411611-49	Skin - Landing Gear Bulkhead - Right						1
18-35	0411126	Skin - Center Section Lower						1
18-36	0411651	Angle - Skin Stiffener						2
18-37	0411636	Angle - Skin Stiffener						2
18-38	0411570	Angle - Skin Stiffener						2
18-39	0411632	Support And Bellcrank Assembly						1
18-40	0411569	Angle - Support - Left						1
18-41	0411569-1	Angle - Support - Right						1
18-42	0411110	Support - Bellcrank						1
18-43	0411288	Bellcrank And Bracket Assembly						1
	0411289	Bracket - Elevator Bellcrank - Lower						1
18-44	0411290	Bracket - Elevator Bellcrank - Upper						1
18-45	0411258	Bellcrank Assembly - Elevator Control						1
18-46	NAS296-4A	Bearing						1
18-47	AN200KS4	Bearing						1
18-48	AN4-10A	Bolt - (Attach Bellcrank To Bracket)						1
18-49	AN365-428	Nut - (Attach Bellcrank To Bracket)						1
	0411528	Bracket - Safety Belt Attachment - Left						1
18-50	0411528-1	Bracket - Safety Belt Attachment - Right						1

ORDER BY PART NUMBER AND NAME

SERIAL NUMBER AND COLOR IF APPLICABLE